ODSL 8


en 08-2014/05 50103923-02


- Reflection-independent distance information
- 2 teachable switching outputs (push-pull)
- M12 turning connector
- Easy alignment through visible red light

▲ Leuze electronic

Optical laser distance sensors

 Dimensioned drawing

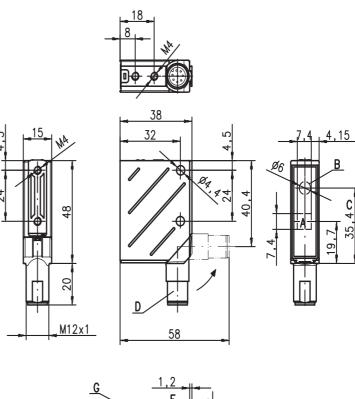




- A Receiver
- B Transmitter
- C Optical axis
- C Optical axis
- **D** 90° turning connector
- E LED yellow, greenF Operational control (ro
- Operational control (rotary switch)
 Reference edge for the measurement (co
- **G** Reference edge for the measurement (cover glass)

Electrical connection

ODSL 8/66-500-S12	
10-30V DC + 1	br/BN
$Q2 \overleftrightarrow - 2 - \Box)$	ws/WH
$(2 \vee 2 - 2)$ GND (-3)	bl/BU
Q1	sw/BK
teach in -5	gr/GY

 

Accessories:


- (available separately)
- Mounting systems
- Cable with M12 connector (K-D ...)
- Control guard

ODSL 8

Specifications Optical data		Tables
Measurement range ¹⁾	20 500mm	
Resolution ²⁾	0.1 0.5mm	
Hysteresis ²⁾ Light source	0.6 … 32mm laser	
Wavelength	650nm (visible red light)	
Max. output power	<1.2 mŴ	
Pulse duration	4ms 2x6mm ² at 500mm	
Light spot Laser warning notice	see remarks	
Error limits (relative to measurem	ent distance)	
Absolute measurement accuracy 1)	± 2% up to 200mm / ± 4% 200 500mm	
Repeatability ³⁾	± 1% up to 200mm / ± 3% 200 500mm	
B/W detection thresh. (6 90% rem.) Temperature drift	≤ 1.5% ≤ 0.2%/°C	
Timing	_ 0.L /0/ 0	
Measurement time	2 7ms	
Response time	≤20ms	
Delay before start-up	≤ 300ms	
Electrical data	10 - 20 / DC (inclusion in the second sec	
Operating voltage U _B Residual ripple	10 30VDC (incl. residual ripple) $\leq 15\%$ of U _B	Diagrar
Open-circuit current	≤ 50mA	U
Switching output/function ⁴⁾	2 push-pull switching outputs	
	pin 2: Q2, PNP light switching, NPN dark switching pin 4: Q1, PNP light switching, NPN dark switching	
Signal voltage high/low	\geq (U _B -2 V)/ \leq 2V	
ndicators		
Green LED continuous light	ready	
flashing (no teach) off	fault, teach values were not applied	
Yellow LED continuous light	no voltage object within teach-in measurement distance (output Q1 ⁵⁾)	
flashing (no teach)	teach values were not applied	
off	object outside teach-in measurement distance (output Q1 ⁴⁾)	
Mechanical data		
Housing Optics cover	metal glass	
Weight	70g	
Connection type	M12 connector, 5-pin, turning	
Environmental data		
Ambient temp. (operation/storage)	-40°C +50°C/-40°C +70°C	
Protective circuit ⁶⁾ VDE safety class ⁷⁾	2, 3 II, all-insulated	
Protection class ⁸⁾	IP 67, IP 69K ⁹⁾	
Laser class	2 (acc. to EN 60825-1)	
Standards applied	IEC 60947-5-2	
1) Luminosity coefficient 6% 90%, at 20		
2) Minimum and maximum value depend or 2) Same object identical environmental corr		
3) Same object, identical environmental cor4) The push-pull switching outputs must no		
5) No display for output Q2		
6) 2=polarity reversal protection, 3=short-ci7) Rating voltage 250VAC	rcuit protection for all outputs	
		1

8) In stop position of the turning connector (turning connector locked) 9) IP 69K test acc. to DIN 40050 part 9 simulated, high pressure cleaning conditions without the use of additives,

acids and bases are not part of the test Characteristic curve of switching outputs:

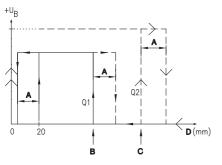

- A Hysteresis
- B Switching point Q1 (teach point)
- С Switching point Q2 (teach point)
- D Measurement distance

Order guide

With M12 connector

Designation		
0DSL 8/66-500-S12		

Part no. 50101880

rams

Remarks

Operate in accordance with intended use!

- ♦ This product is not a safety sensor and is not intended as personnel
- The protection.
 The product may only be put into operation by competent persons.
 Only use the product in accor-
- dance with the intended use.
- Measurement time depends on the reflectivity of the measurement object and on the méasurement mode.

ODSL 8

Optical laser distance sensors

Laser safety notices – Laser class 2

ATTENTION, LASER RADIATION - LASER CLASS 2

Never look directly into the beam!

The device fulfills the EN 60825-1:2008-05 (IEC 60825-1:2007) safety regulations for a product in **laser class 2** as well as the U.S. 21 CFR 1040.10 regulations with deviations corresponding to "Laser Notice No. 50" from June 24th, 2007.


- between the laser beam or in the direction of reflecting laser beams!
- If you look into the beam path over a longer time period, there is a risk of injury to the retina.
- ✤ Do not point the laser beam of the device at persons!
- the laser beam with an opaque, non-reflective object if the laser beam is accidentally directed towards a person.
- ✤ When mounting and aligning the device, avoid reflections of the laser beam off reflective surfaces!
- CAUTION! Use of controls or adjustments or performance of procedures other than specified herein may result in hazardous light exposure.
 - The use of optical instruments or devices (e.g., magnifying glasses, binoculars) with the product will increase eye hazard.
- Adhere to the applicable legal and local regulations regarding protection from laser beams acc. to EN 60825 (IEC 60825) in its latest version.
- The device must not be tampered with and must not be changed in any way. There are no user-serviceable parts inside the device. Repairs must only be performed by Leuze electronic GmbH + Co. KG.

NOTICE

Affix laser information and warning signs!

Laser information and warning signs are affixed to the device(see ①). In addition, self-adhesive laser information and warning signs (stick-on labels) are supplied in several languages (see ②).

- Affix the laser information sheet with the language appropriate for the place of use to the device.
- When using the device in the US, use the stick-on label with the "Complies with 21 CFR 1040.10" notice.
- Affix the laser information and warning signs near the device if no signs are attached to the device (e.g. because the device is too small) or if the attached laser information and warning signs are concealed due to the installation position. Affix the laser information and warning signs so that they are legible without exposing the reader to the laser radiation of the device or other optical radiation.

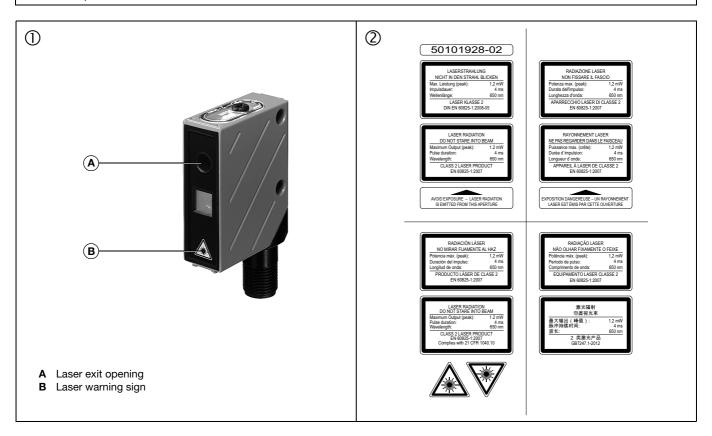


▲ Leuze electronic


ODSL 8

Installation instructions

Mounting systems are available which have to be ordered separately at Leuze electronic. Apart from this, the drilled-through holes and threaded holes are suitable for the individual mounting of the ODSL 8, depending on the area in which it is used. When mounting, avoid application of excessive force on the housing.

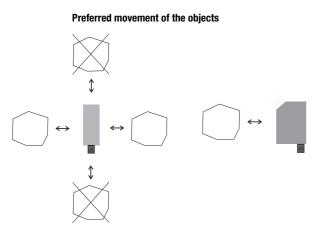


Preferred mounting in connection to objects with structured surface

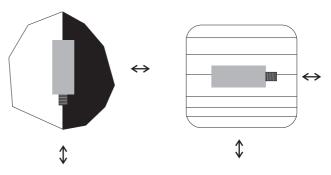


View through a chase


If the ODSL 8 has to be installed behind a cover, the chase has to have at least the size of the optical glass cover. Otherwise, a correct measurement is not possible or can not be guaranteed.

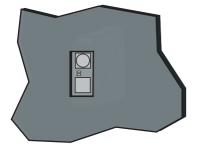

Alignment to measurement objects with reflecting surfaces

If the measurement object to be detected has a reflecting surface, a measurement may not be possible depending on the angle in which the light is reflected by the measurement object's surface. Adjust the angle between the sensor and the measurement object such that the sensor can reliably detect the measurement object.

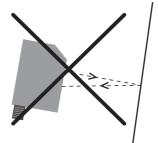

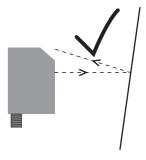

Optical laser distance sensors

ODSL 8

T_I teach-in with rotary switch

1. Position measurement object at the desired measurement distance (①).

2. Turn rotary switch into the desired position (Low, High, 1, 2) (2). Wait for optical confirmation by flashing of the LEDs.

Teach function	Rotary switch position	Green LED	Yellow LED
Switching output Q1	1	Flash synchronously	
Switching output Q2	2	Flash alternatingly	

3. For teaching, position rotary switch onto "Run" (③). Wait for optical confirmation by end of flashing signal (green LED on).

T_I teach-in via input

- 1. Position measurement object at the desired measurement distance.
- **2.** The respective teach function is activated by applying $+U_B$ to teach input (pin 5). The teach event is signaled by flashing of the LEDs.

Teach function	Duration of the teach signal	Green LED	Yellow LED
Switching output Q1	2 4s	Flash synchronously	
Switching output Q2	4 6s	Flash alternatingly	

- **3.** To finish the teach event, disconnect the teach input from $+U_B$ or switch it to 0V after the desired time.
- 4.A successful teach event is signaled by the end of the flashing (green LED on)


Error messages

Continuously flashing LEDs signal an unsuccessful teach event (sensor not ready):

Green LED	Yellow LED	Error
Flash synchronously		Teach switching output Q1 unsuccessful
Flash alternatingly		Teach switching output Q1 unsuccessful

Remedy:

- Repeat teach event or
- Disconnect sensor from voltage to restore the old values.

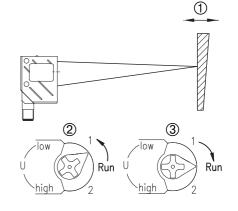

▲ Leuze electronic

ODSL 8